

## **RM117H RAD. TEST KEY**

**TEST # 1, "IADJ @ 4.25V IN" \ TEST # 2, "IADJ @ 41.25V IN"**

**TEST # 3, "DELTA IADJ (LINE)" \ TEST # 4, "DELTA IADJ (LOAD)"**

**TEST # 5, "IQ @ 4.25V IN, -5MA LOAD"**

**TEST # 6, "IQ @ 14.25V IN, -5MA LOAD"**

**TEST # 7, "IQ @ 41.25V IN, -5MA LOAD"**

**TEST # 8, "VO @ 4.25V IN, -5MA LOAD"**

**TEST # 9, "VO @ 4.25V IN, -0.5A LOAD"**

**TEST # 10, "VO @ 41.25V IN, -5MA LOAD"**

**TEST # 11, "VO @ 41.25V IN, -0.05A LOAD"**

**TEST # 12, "VRLINE, -5MA LOAD"**

**TEST # 13, "VRLOAD @ 6.25V IN"**

**TEST # 14, "VRLOAD @ 41.25V IN"**

**TEST # 15, "VRTH @ 14.6V IN, -0.5A LOAD"**

**TEST # 16, "IOS1 @ 4.25V IN"**

**TEST # 17, "VOUT5 RECOVERY" \ TEST # 18, "IOS2 @ 40V IN"**

**TEST # 19, "VOUT6 RECOVERY" \ TEST # 20, "VSTART"**

**TEST # 21, "VO @ 6.25V IN, -5MA LOAD, 150'C" \**

**TEST # 22, "V(NOISE)"**

**TEST # 23, "LINE TRANSIENT RESPONSE"**

**TEST # 24, "LOAD TRANSIENT RESPONSE"**

**TEST # 25, "RIPPLE REJECTION"**